

PME2020 如何从 PME 服务器导出证书

问题描述:


如何从 PME 服务器导出证书

解决方案:

步骤如下:

1. 打开 Internet 选项

打开方式: 控制面板 - Internet 选项

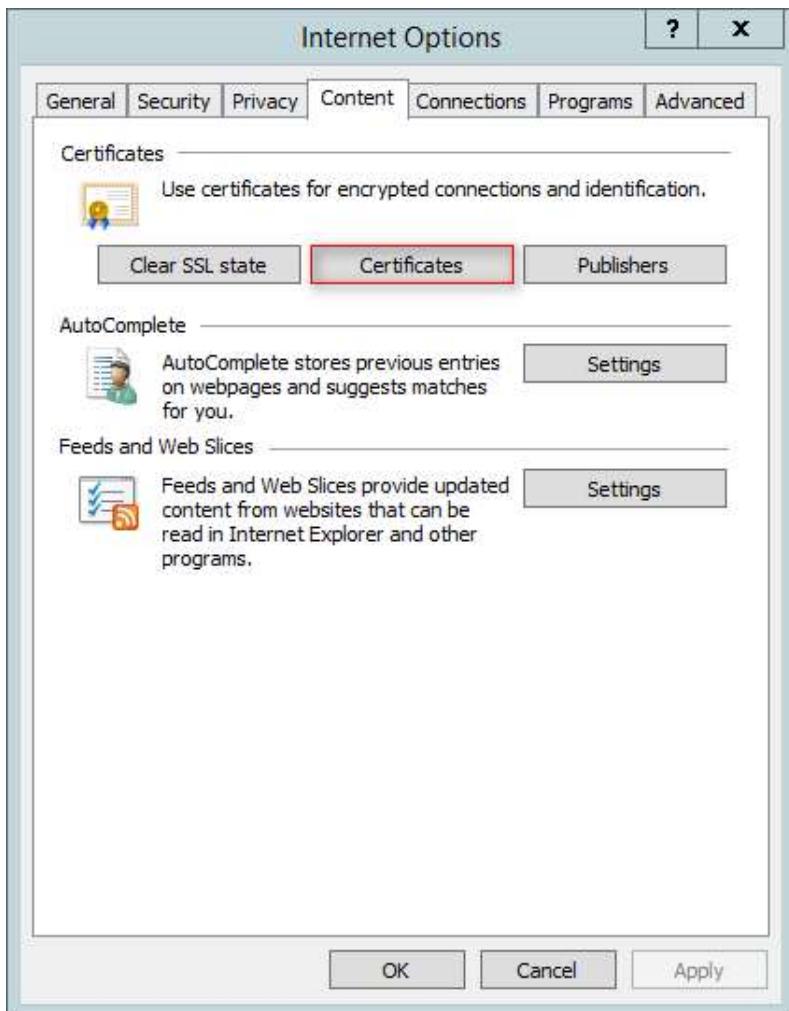

2. 点击 Content(内容) - Certificate - Trusted Root Certificate Authorities
选中所需导出的证书, 按默认步骤导出即可。

Certificates

Intended purpose: <All>

Intermediate Certification Authorities

Trusted Root Certification Authorities

Trusted Pub...

Issued To	Issued By	Expiration...	Friendly Name
Microsoft Root Cert...	Microsoft Root Certifi...	5/9/2021	Microsoft Root C...
Microsoft Root Cert...	Microsoft Root Certifi...	6/23/2035	Microsoft Root C...
Microsoft Root Cert...	Microsoft Root Certifi...	3/22/2036	Microsoft Root C...
NO LIABILITY ACC...	NO LIABILITY ACCEP...	1/7/2004	VeriSign Time St...
PME91	PME91	4/15/2030	<None>
thawte Primary Ro...	thawte Primary Root CA	7/16/2036	thawte
Thawte Timestampi...	Thawte Timestamping...	12/31/2020	Thawte Timesta...
UTN-USERFirst-Obj...	UTN-USERFirst-Object	7/9/2019	Sectigo (UTN Ob...
VeriSign Class 3 Pu...	VeriSign Class 3 Public...	7/16/2036	VeriSign

Import...

Export...

Remove

Advanced

Certificate intended purposes:

Server Authentication

View

Close

Certificate Export Wizard


Welcome to the Certificate Export Wizard

This wizard helps you copy certificates, certificate trust lists and certificate revocation lists from a certificate store to your disk.

A certificate, which is issued by a certification authority, is a confirmation of your identity and contains information used to protect data or to establish secure network connections. A certificate store is the system area where certificates are kept.

To continue, click Next.

Next > Cancel

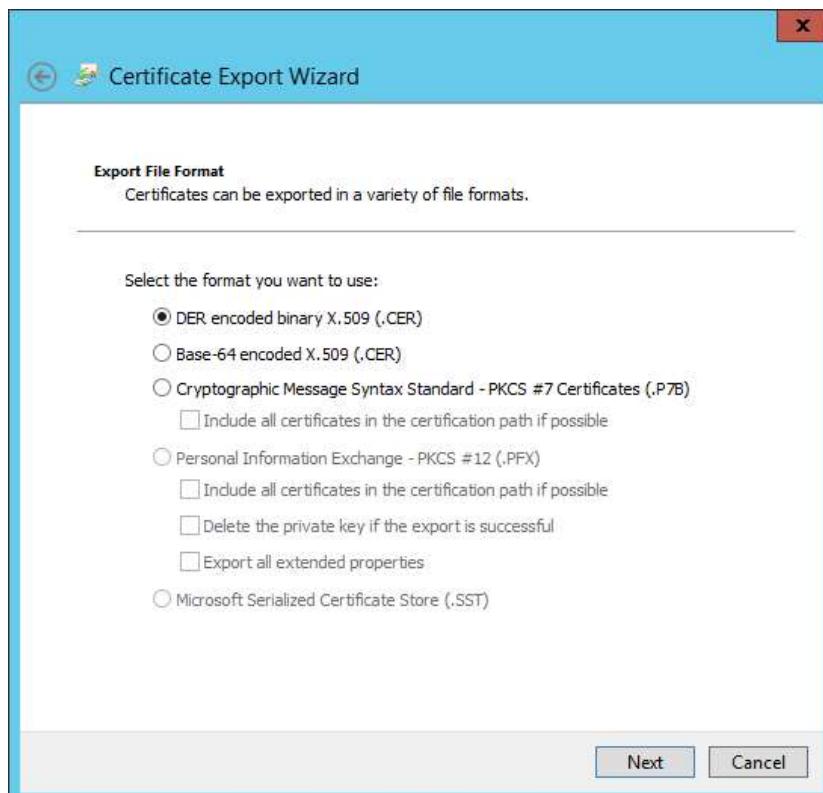

输入文件名，可与原证书同名。

