



### 1、添加 SysTimeRtc 和 SysTimeCore 库

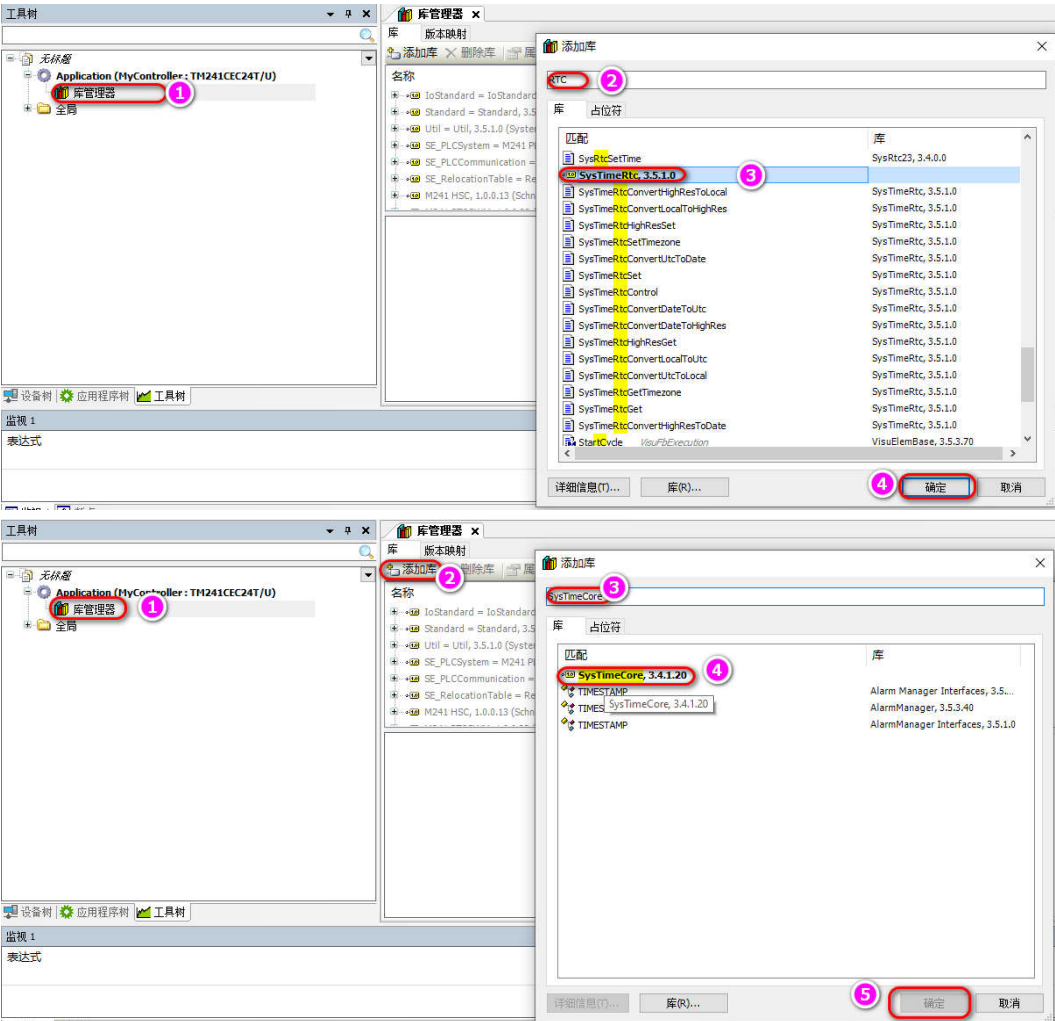

### 2、创建 SET\_RTC 变量

1	VAR	uiSetYear	%mw0	UINT
2	VAR	uiSetMonth	%mw1	UINT
3	VAR	uiSetDay	%mw2	UINT
4	VAR	uiSetHour	%mw3	UINT
5	VAR	uiSetMinute	%mw4	UINT
6	VAR	uiSetSecond	%mw5	UINT
7	VAR	uiSetMSecond		UINT
8	VAR	udiResultConvertToUtc	%md3	UDINT
9	VAR	dwSetTimeStamp	%md4	DWORD
10	VAR	xCommandSetRtc	%mx30.0	BOOL
11	VAR	uidResultRtcSet	%md5	UDINT

### 3、调用 SysTimeRtcConvertDateToUtc 和 SysTimeRtcSet 功能块

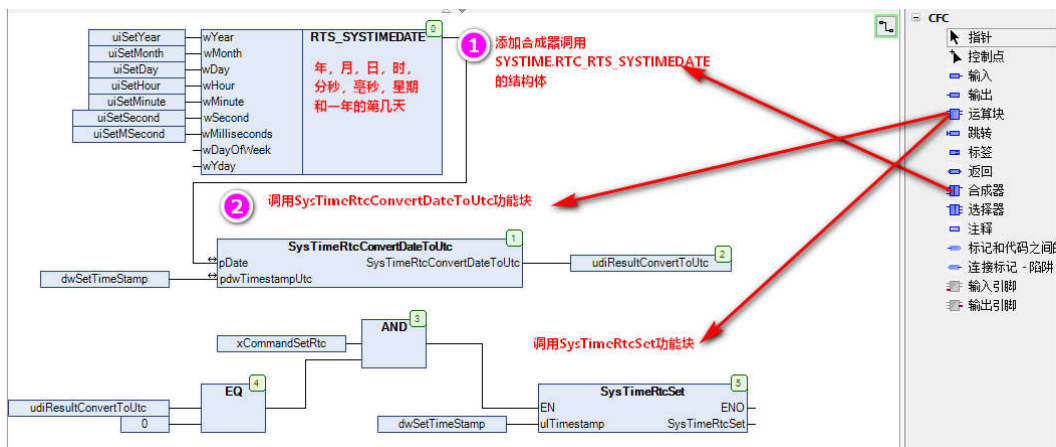

#### 4、创建 SET\_RTC 变量

1	VAR	stGetDate		SYSTIMEDATE
2	VAR	udResultRtcGet	%md25	UDINT
3	VAR	uidResultConvertToDate	%md26	UDINT
4	VAR	uiGetYear	%mw54	UINT
5	VAR	uiGetMonth	%mw55	UINT
6	VAR	uinGetDay	%mw56	UINT
7	VAR	uiGetHour	%mw57	UINT
8	VAR	uiGetMinute	%mw58	UINT
9	VAR	uiGetSecond	%mw59	UINT
10	VAR	uiGetSeconds	%mw60	UINT
11	VAR	uiGetDayOfWeek	%mw61	UINT
12	VAR	uiGetYday	%mw62	UINT

#### 4、调用 SysTimeRtcGet 和 SysTimeRtcConvertUtcToDate 功能块

